



# Short installation instructions

## Tools required:

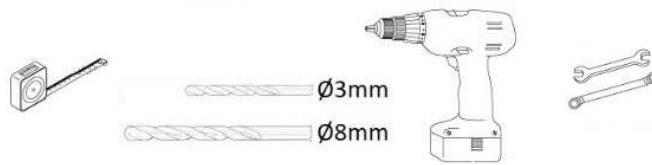


## Required material (assembly set):

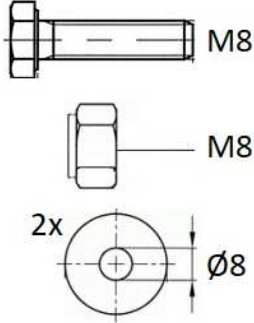

		Bolt and nut					
		2x Front	2x Back	3x Front	3x Back	4x Front	4x Back
System length	30						
	40						
	50						
	60						
	70						
	80						
	90						
	100						
	110						
	120						
	130						

## How to start:


Position the draw set in the van with the top cover on, as well as the draws in it. Check if complete system fits correctly and all draws open and close without any problem.

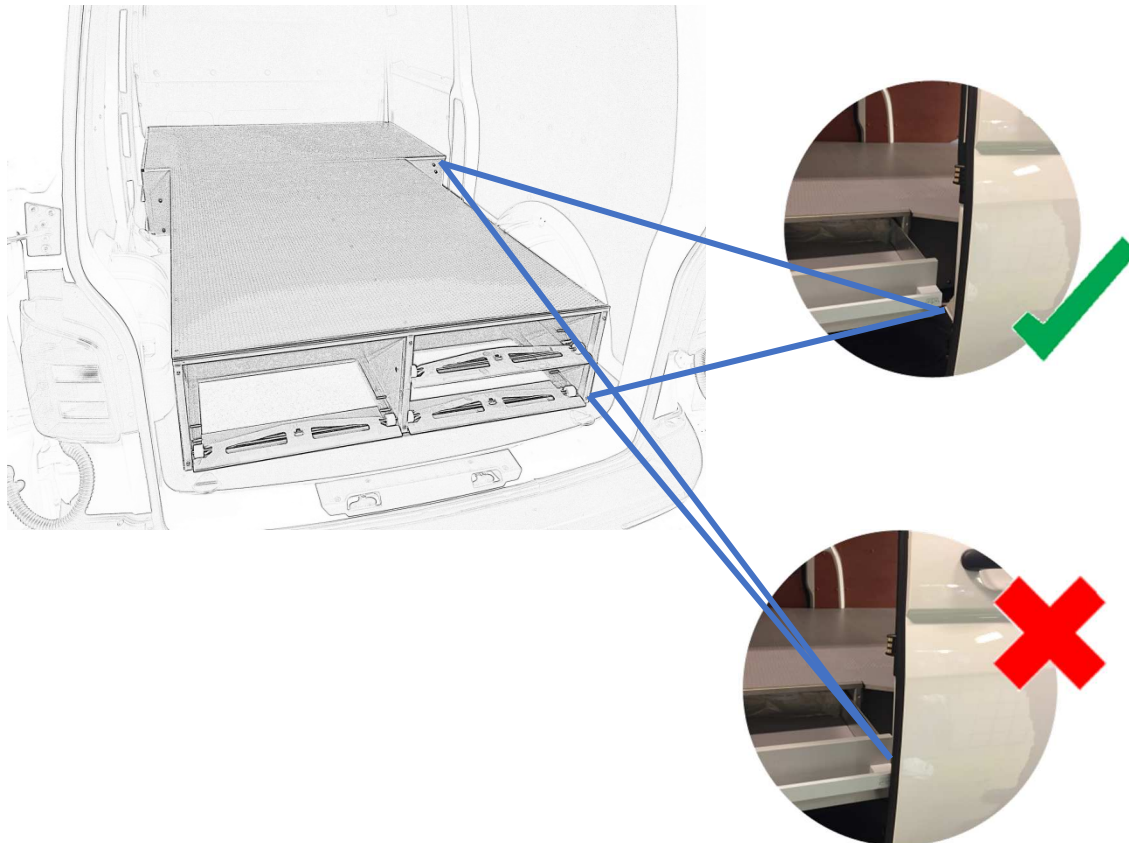

# Short installation instructions

## Securing the draw set:

1. Pilot drill with a 3 mm drill bit a hole through the mounting bracket and the floor. Check underneath the vehicle if the mounting plates will fit. If all ok drill the hole with an 8 mm drill bit. Treat these holes with anti-corrosion paint. Secure the mounting bracket with proposed bolt and nut.

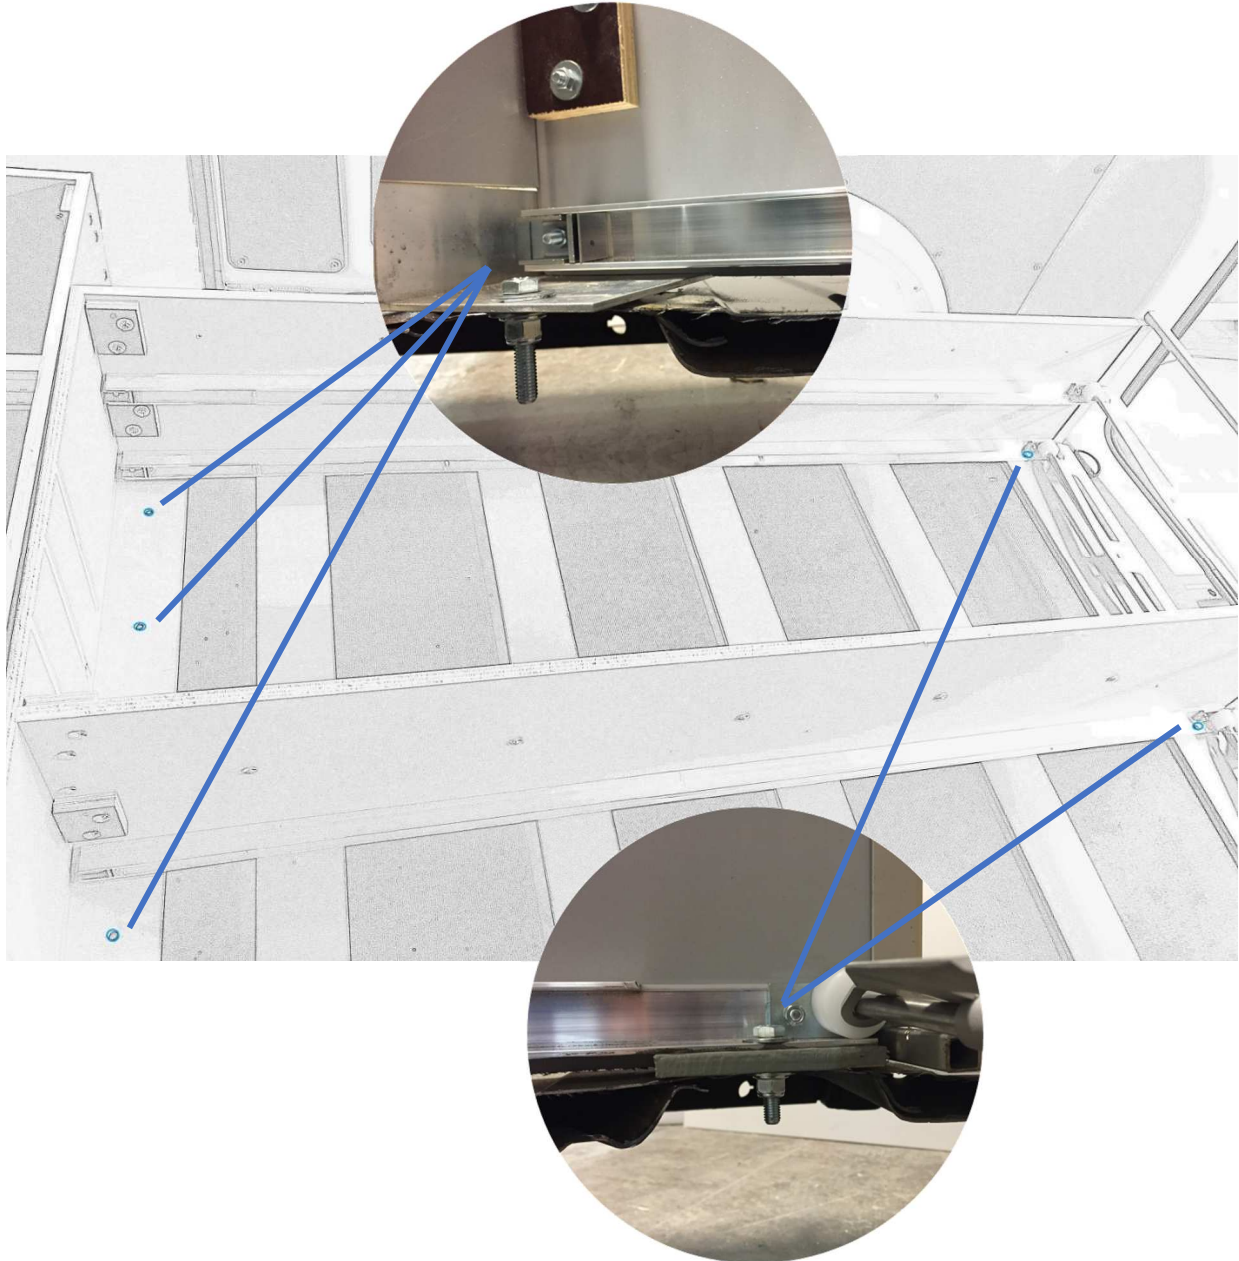

- 1) Pilot drill with a 3 mm drill bit a hole through the U profile and the floor. Check underneath the vehicle if the mounting plates will fit. If all ok drill the hole with an 8 mm drill bit. Treat these holes with anti-corrosion paint. Secure the draw unit chassis with supplied bolt and nut.
2. Place the draws back in the draw chassis and fix the top cover place.